

Barry Stoodley Pty Ltd

TECHNICAL DATA SHEET




CK101



CK108



CK93U &
CK94A

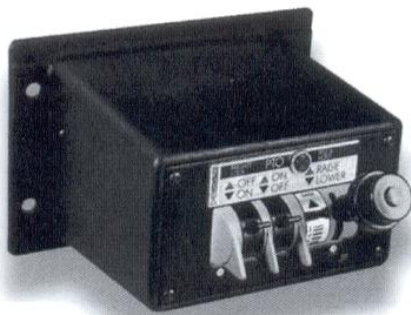

CK114



CK90



CK113

PNEUMATIC CONTROLS

Designed for modern truck cabs, these controls are manufactured to exacting tolerances ensuring consistent, trouble-free operation.

Powauto produces a wide variety of controls dependent on your requirements. From PTO only to the most complex truck and trailer assembly.

Configured for discreet fitment – ordering the right control for your truck cab is easy.

PRODUCT FEATURES

- **INTEGRAL PLASTIC BODY**
Engineering plastics technology for accuracy and repeated cycles of operation
- **CLEAR DECALS**
Ergonomically designed for ease of use
- **BRACKETS AND PEDESTALS INCLUDED**
Use with or without, depending on requirements
- **CAMS MADE IN KEVLAR**
Long wearing consistent operation
- **LIGHT**
Visual check when PTO is engaged
- **AUTO KICK-OUT FOR PTO**
Prevents damage to your transmission due to prolonged engagement (Some models only)


AIR CONTROL KITS

Barry Stoodley Pty Ltd

TECHNICAL DATA SHEET

Typical assembly (CK113 shown)

(For full instructions refer to installation guide or your see your Powauto distributor)

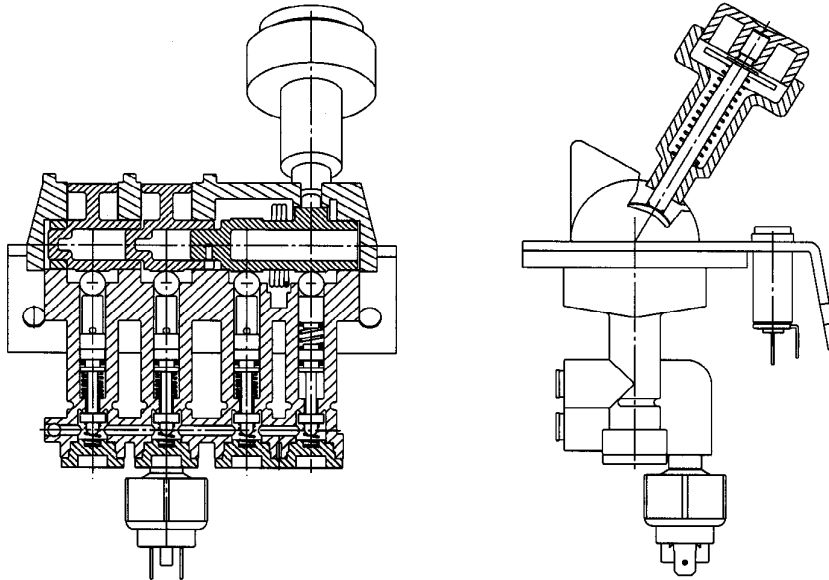

Technical specifications

Functions

Mounting*

Operation

Technical specifications	Functions	Mounting*	Operation
CK 90	PTO/hoist	Bracket	Auto PTO disengage/no hold on lower
CK 90A	PTO/hoist	Bracket	Auto PTO disengage/hold on lower
CK 90C	PTO/hoist	Bracket	No auto PTO disengage/hold on lower
CK 93U & CK 94A	PTO only	Through Dash	PTO engage/disengage
CK 101	PTO only	Bracket	PTO engage/disengage
CK 108	Double PTO/hoist and auxilliary	Pedestal	No auto PTO disengage/hold on lower
CK 113A	PTO/hoist/auxilliary	Bracket	Auto PTO disengage/hold on lower
CK 113C	PTO/hoist/auxilliary	Bracket	Hold on lower only
CK 114A	PTO/hoist/auxilliary	Pedestal	Auto PTO disengage/hold on lower
CK 114C	PTO/hoist/auxilliary	Pedestal	Hold on lower only

Spares: no user serviceable parts available. Refer to Powauto or your dealer for replacement.

*May be ordered without brackets – refer to Powauto or your distributor for details.

Repair Kits: CK90 series: SK027
 CK101: SK031
 CK108: SK032
 CK113/114: SK051